



## Setup and Handling of Ultra-Containment Berm® Ultimate Model

The rugged construction of the Ultra-Containment Berm, Ultimate Model offers excellent chemical resistance and durability. To ensure the longest life and most effective use of the Berm, both setup and handling are key.

The following guidelines are provided to ensure that you get the best results.

### DEPLOYMENT:

- 1) Select a level area and be sure that ground is swept clean of debris and sharp objects. The use of a ground cloth is recommended.
- 2) Place the folded Berm at the setup location. Do not drag the folded Berm. Unfold Berm and position as desired. Position the frame legs facing toward the inside of the Berm.
- 3) On the shorter ends insert the yellow urethane stakes through the oval shaped holes in the bottom of the Berm, through the black polyethylene base plates and into the pockets at the top of the wall. Firmly seat stakes. (This step is required only at first setup.)
- 4) If tread protectors are being used, place these in the unit at this time.
- 5) The Berm is ready for use.

### STORAGE:

- Sweep out Berm and be sure that it is dry and free of contaminates.
- Store unit in clean dry environment.

### REPAIR AND MAINTENANCE

- If a puncture or tear occurs, call for a patching kit. Describe the damage to the service representative to ensure receipt of the proper kit.
- Replacement frame assemblies and urethane stakes are available from your dealer.

### MISCELLANEOUS

- While the Berm will perform properly with liquids reaching the top of the wall, it is suggested that the recommended fill line not be exceeded. The fill line is 1" below the top of the Berm. A Berm that is filled to the top edge of the wall is subject to splash over in the event of wind or being bumped etc.
- Only Forklifts with pneumatic tires should be run over frames.
- Feel free to contact UltraTech International direct at 1-800-353-1611 for further information.